

SMT Special Splice Tape


→ Panasonic Model: CM402용

- Panasonic CM402 모델은 부품 자동 인식을 위해 검은색 레코드가 필요합니다.


P/N	Description of Goods	Quantity	Application
SMS-1408	2pcs of matt black tape + 1pc of yellow tape	500pcs/box	8mm
SMS-1308	3pcs of matt black tape	500pcs /box	8mm
SMS-1312	2pcs of matt black tape, with PET liner	1000pcs /box	12mm 이상
SMS-1608	2pcs of matt black tape, without PET Liner	1000pcs /box	8mm
SMS-1612	2pcs of matt black tape, without PET Liner	1000pcs /box	12mm 이상




Demo(SMS-1608)

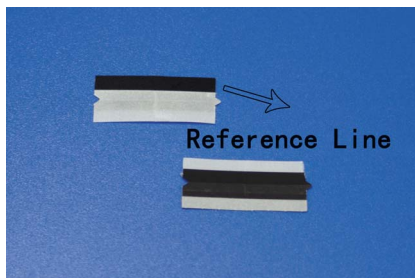


Picture : SMS-1608사진

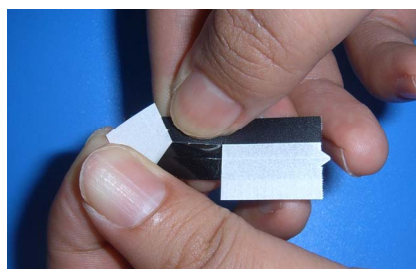


Step 1 : 종이 라이너를 찢는다.

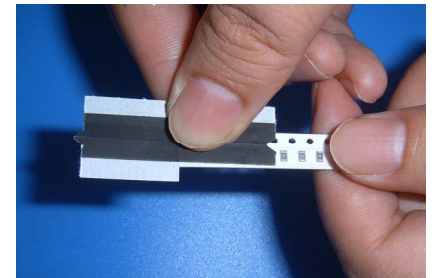


Step 2 : 캐리어 테이프에 조인트 테이프를 붙인다.

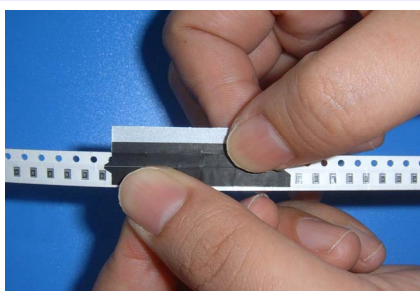


Step 3 : 다른쪽 종이 라이너를 찢고, 다른 캐리어 테이프에 붙인다.

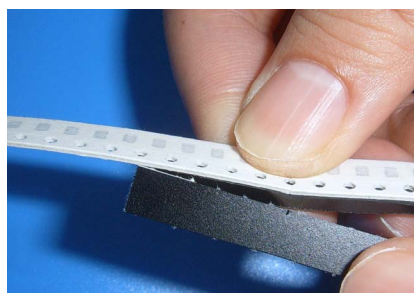


Step 4 : 가이드 라이너를 찢는다.

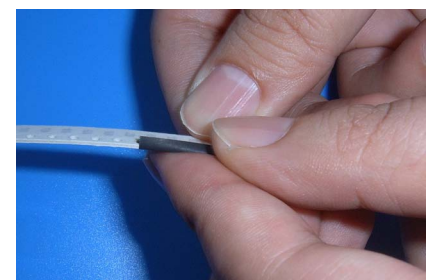


Step 5 : 테이프를 접는다.

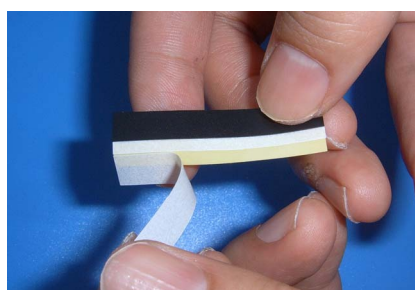

Step 6 : 라이너를 떼어낸다. (SMS-1708)

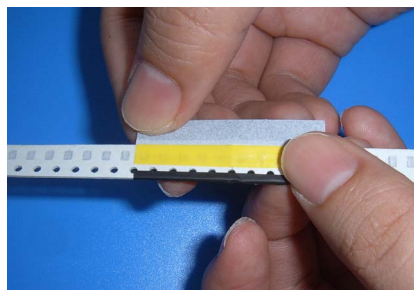

Step 7 : 테이프를 연결된 테잎에 붙인다. (SMS-1708)

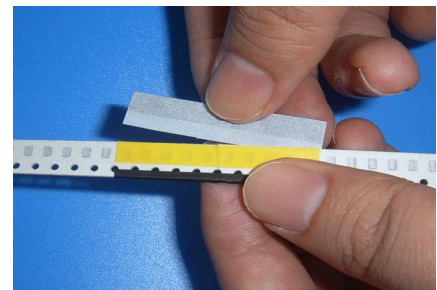

Step 8 : SMS-1708의 라이너를 찢어버린다.